

- 32 AIR FLOW METER
- 33 CRANK ANGLE SENSOR
- 34 CAM SENSOR
- 42 ACCELERATOR PEDAL DEPRESSION SENSOR
- 43 CATALYST TEMPERATURE SENSOR
- 44 INTAKE AIR TEMPERATURE SENSOR
- 45 WATER TEMPERATURE SENSOR
- 46 PRESSURE SENSOR
- 47 AIR/FUEL RATIO SENSOR
- 48 EXHAUST GAS TEMPERATURE SENSOR

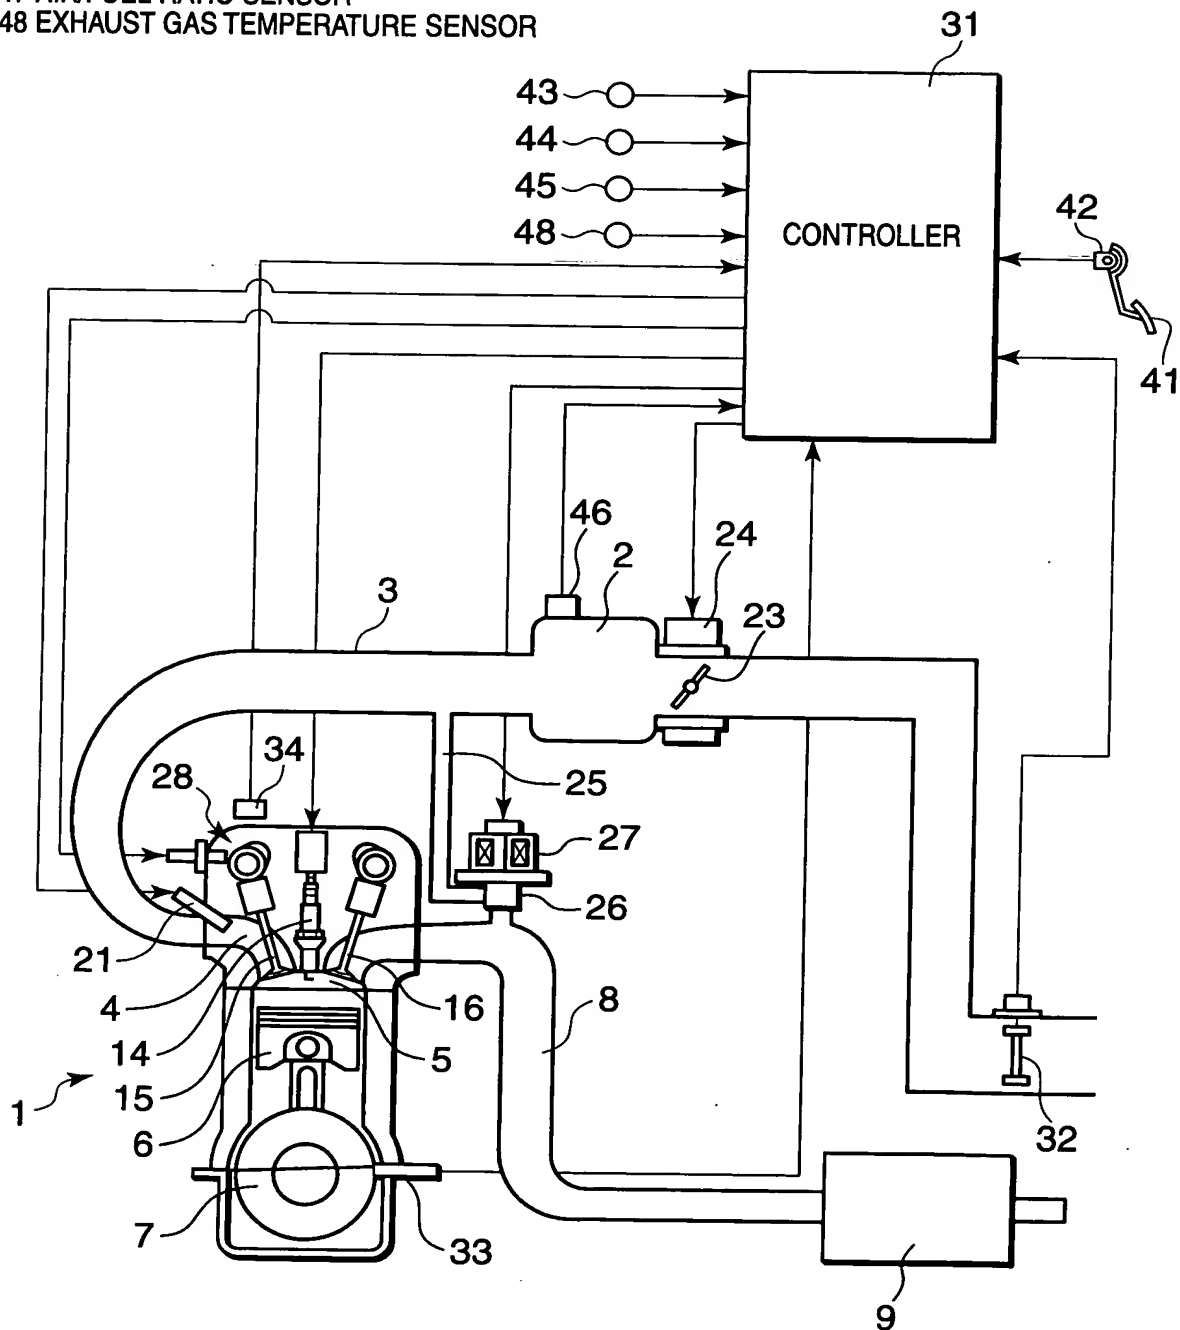


FIG. 1

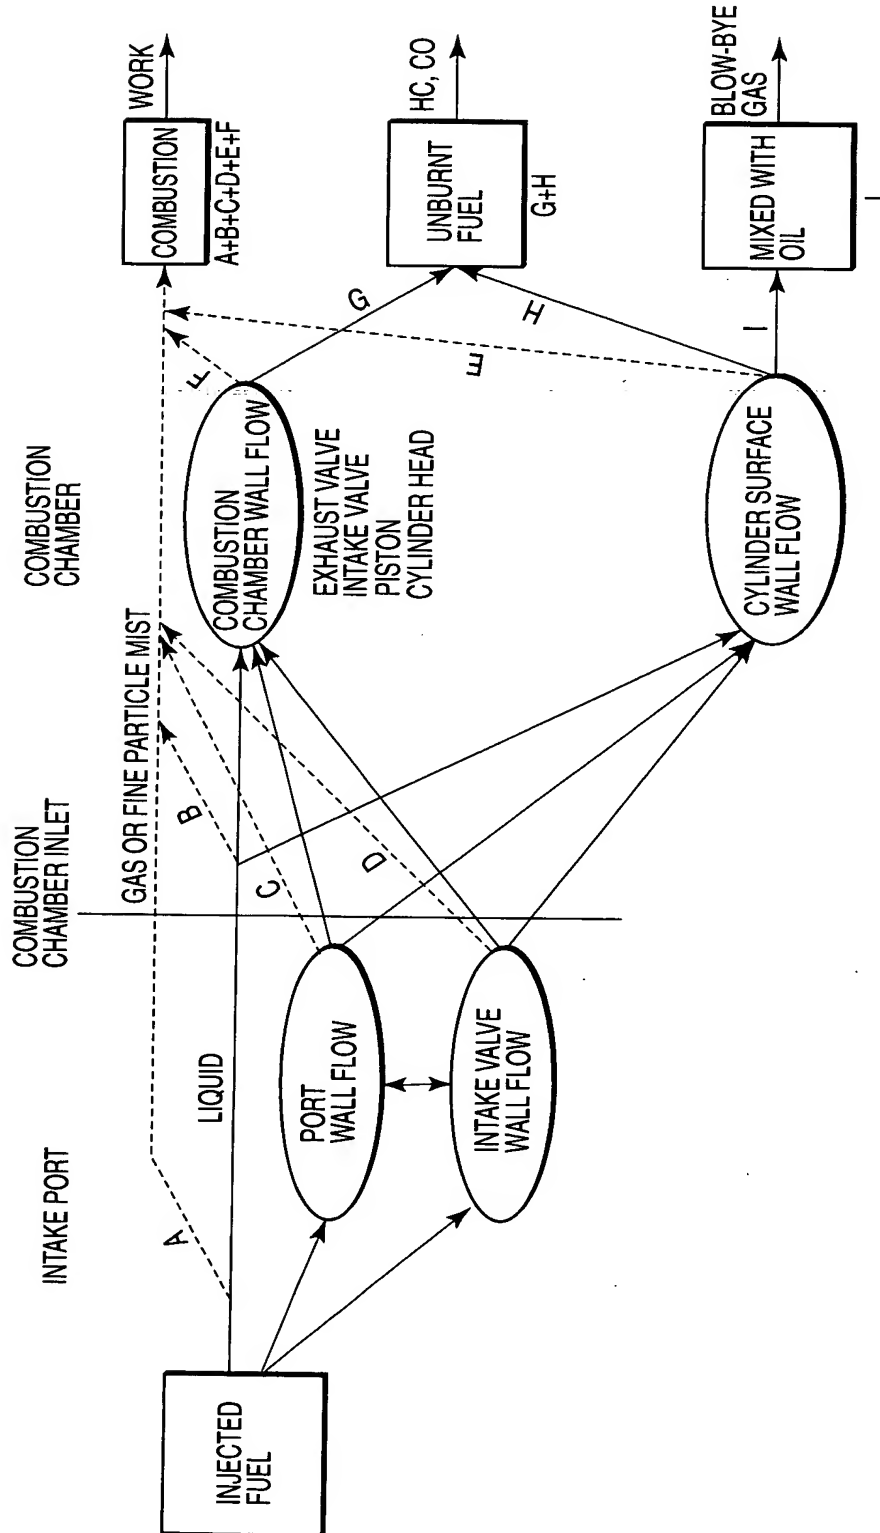


FIG. 2

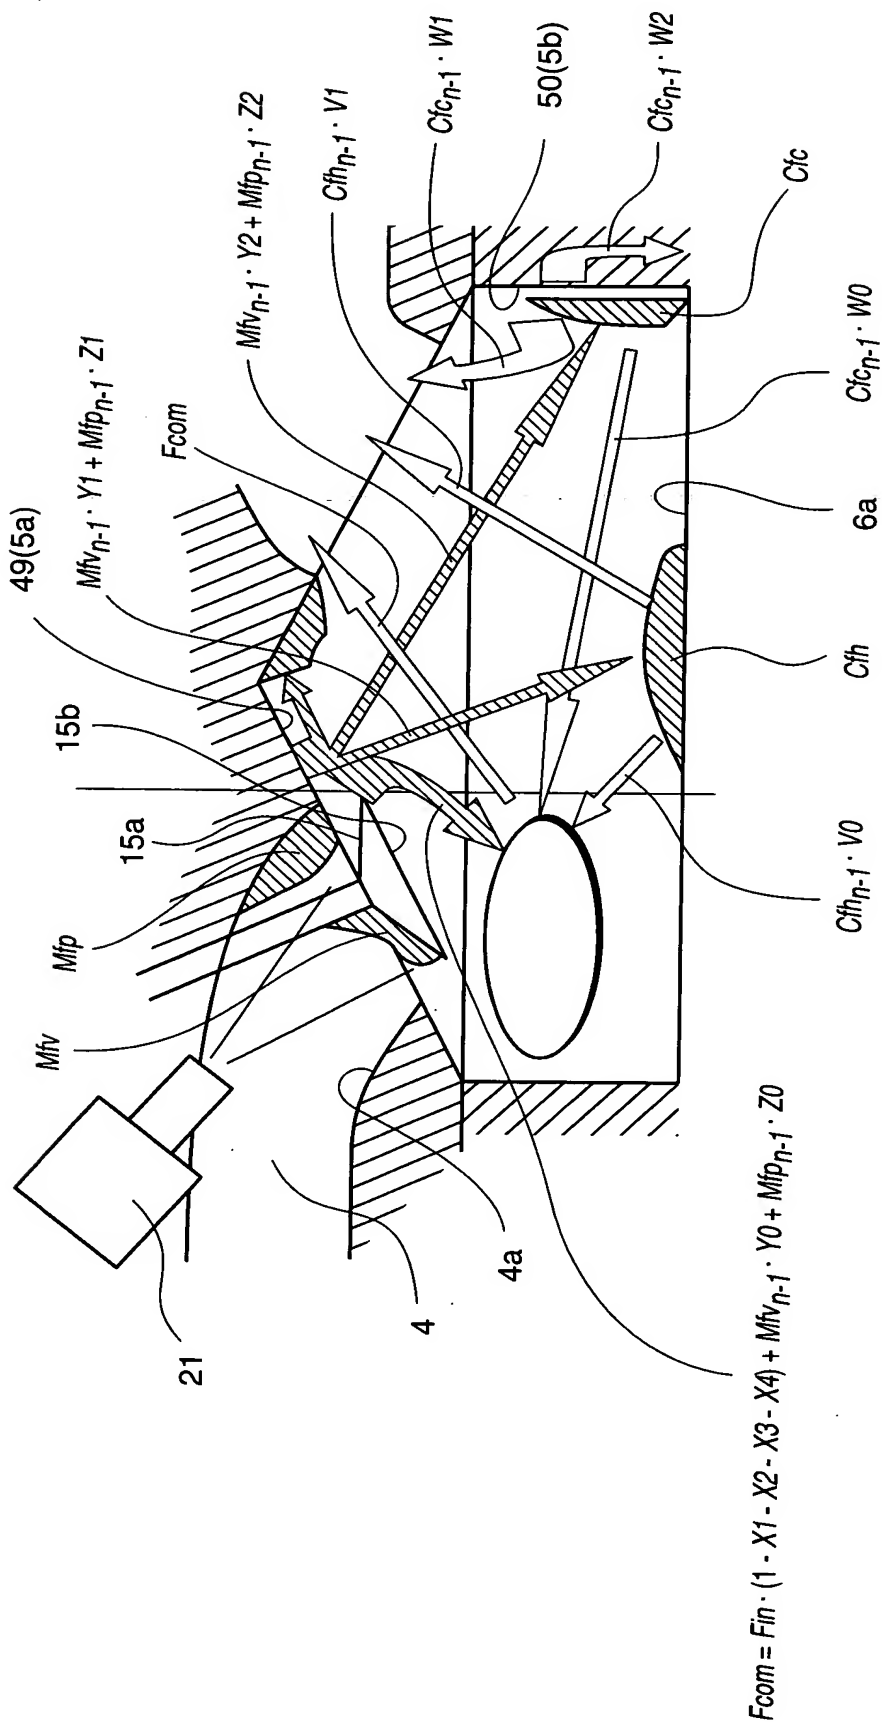


FIG. 3

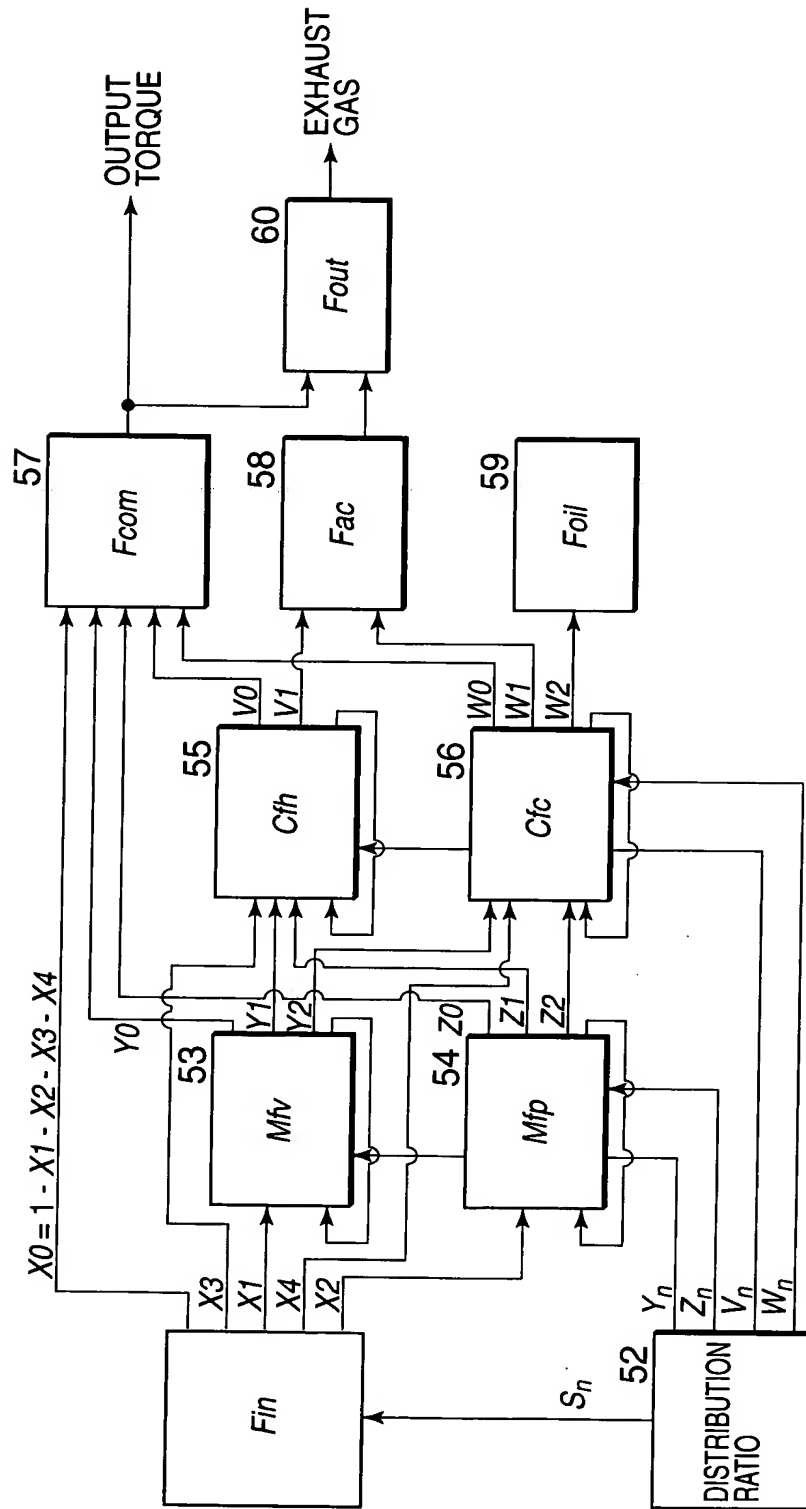


FIG. 4

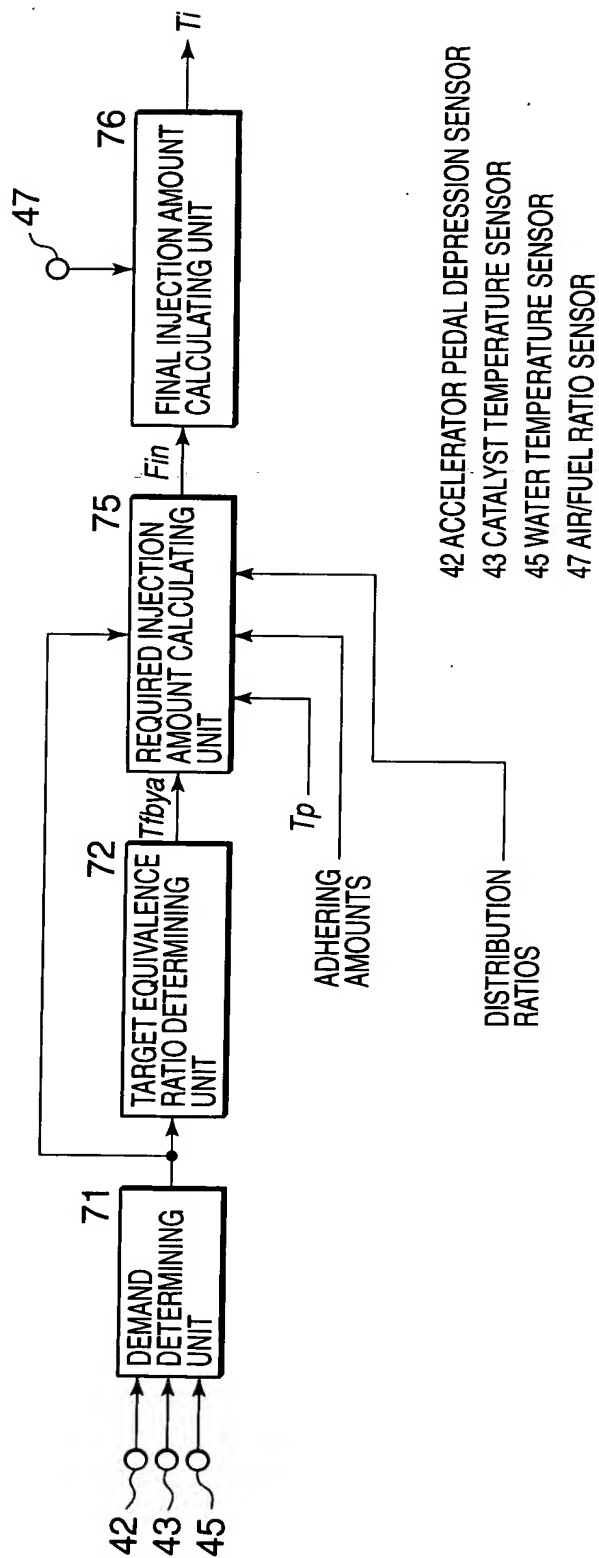


FIG. 5

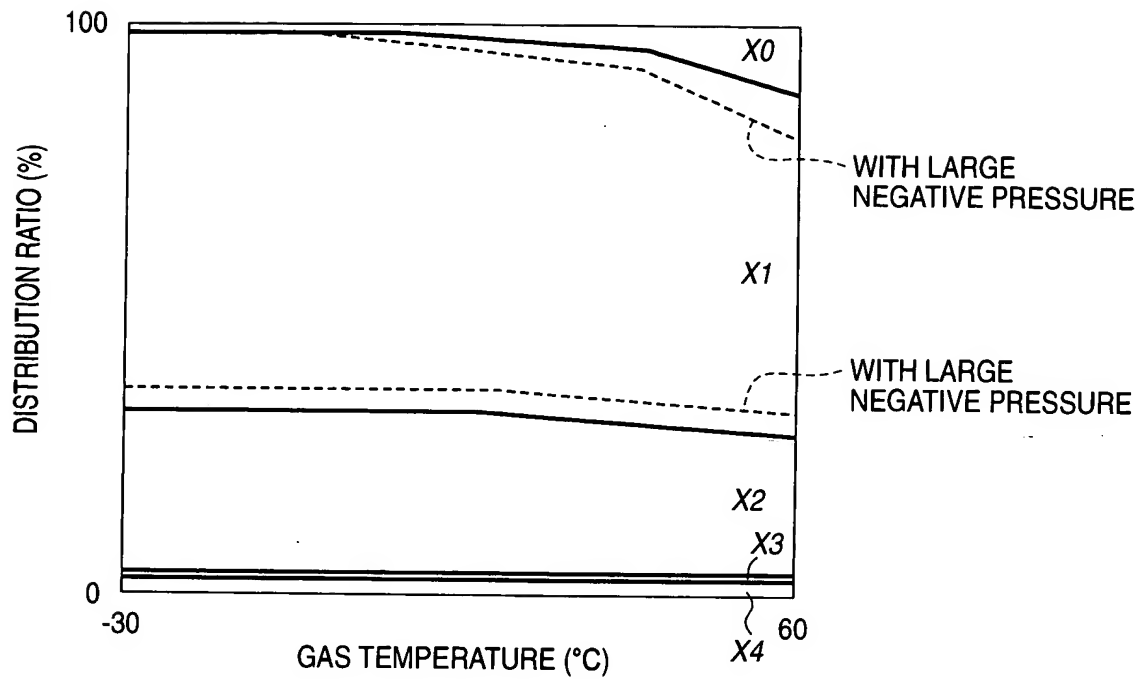


FIG. 6

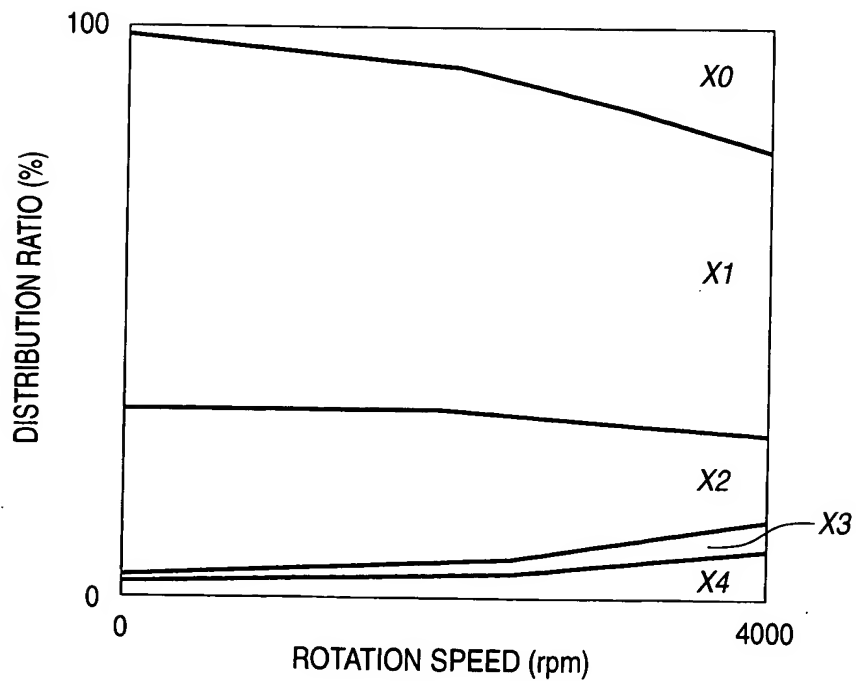


FIG. 7

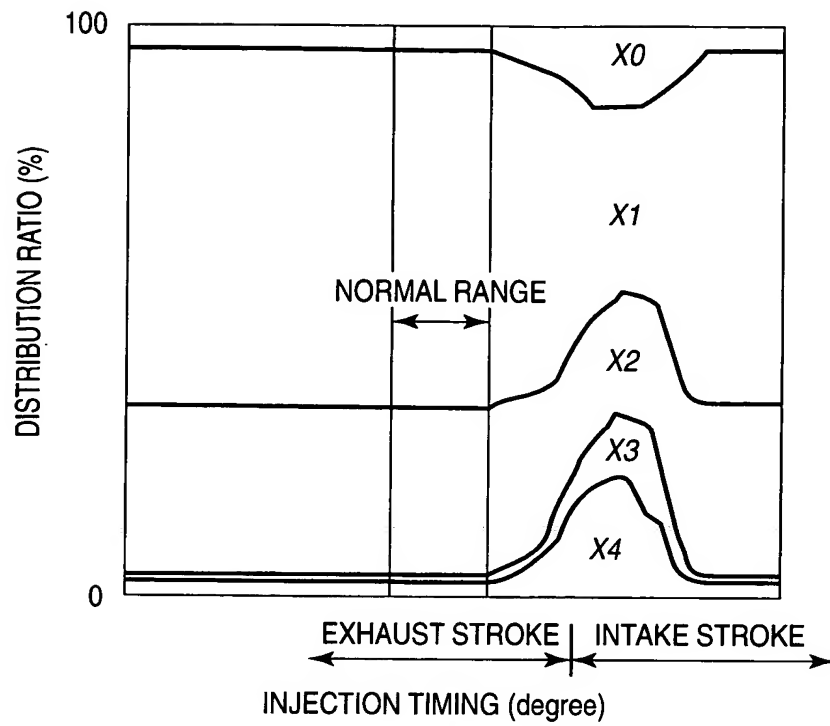


FIG. 8

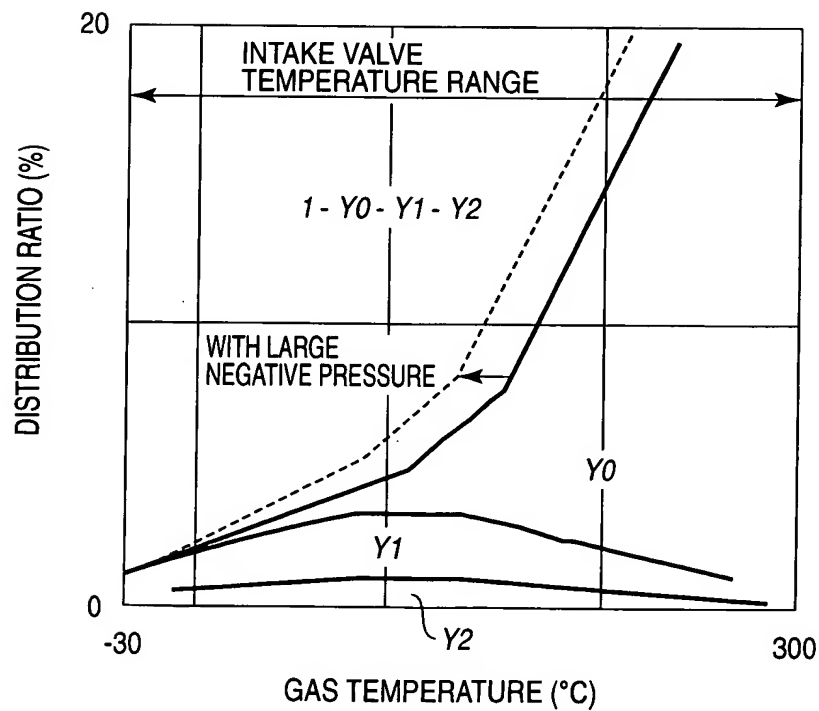


FIG. 9

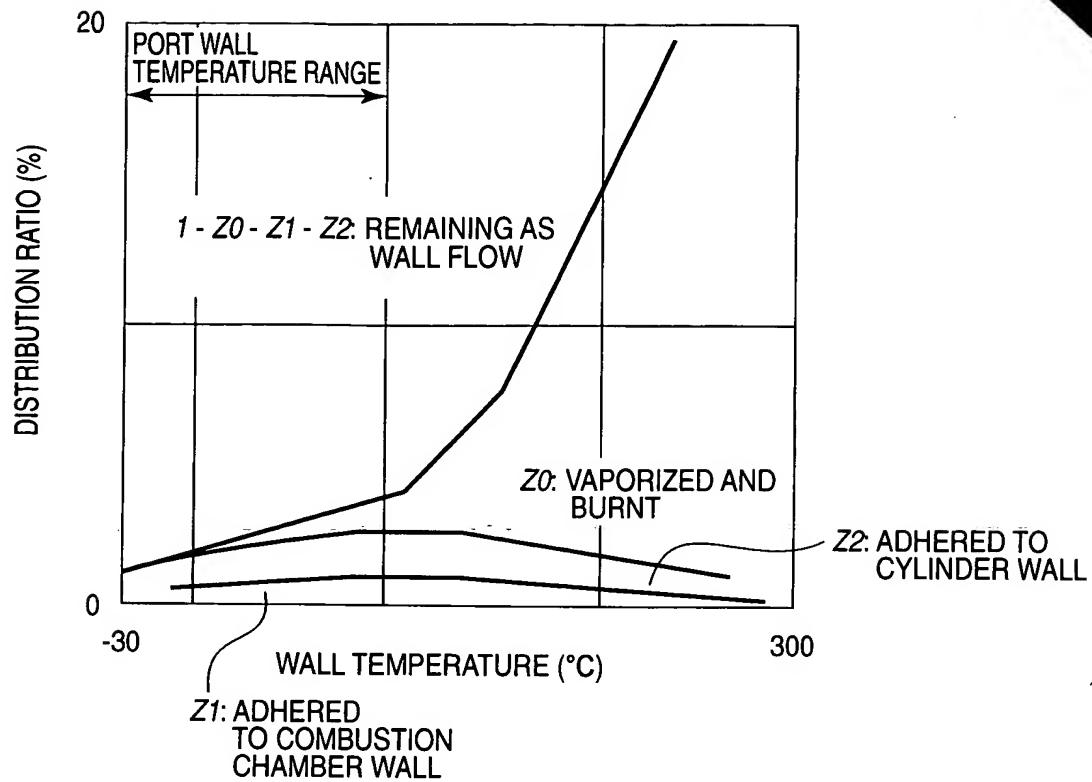


FIG. 10

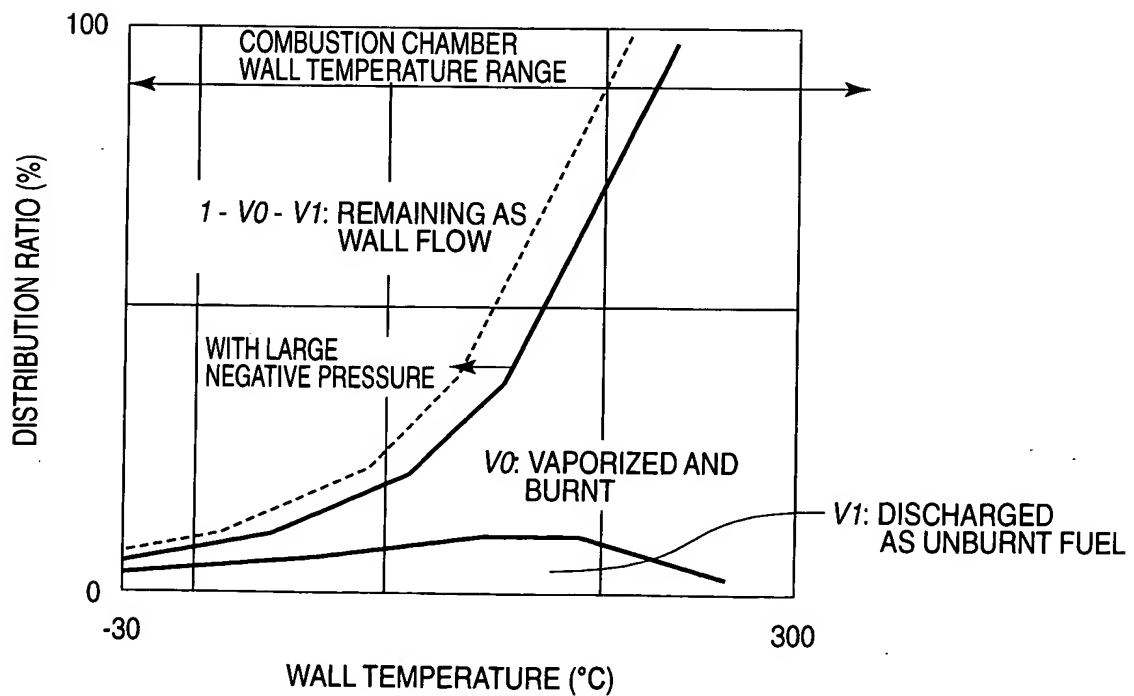


FIG. 11



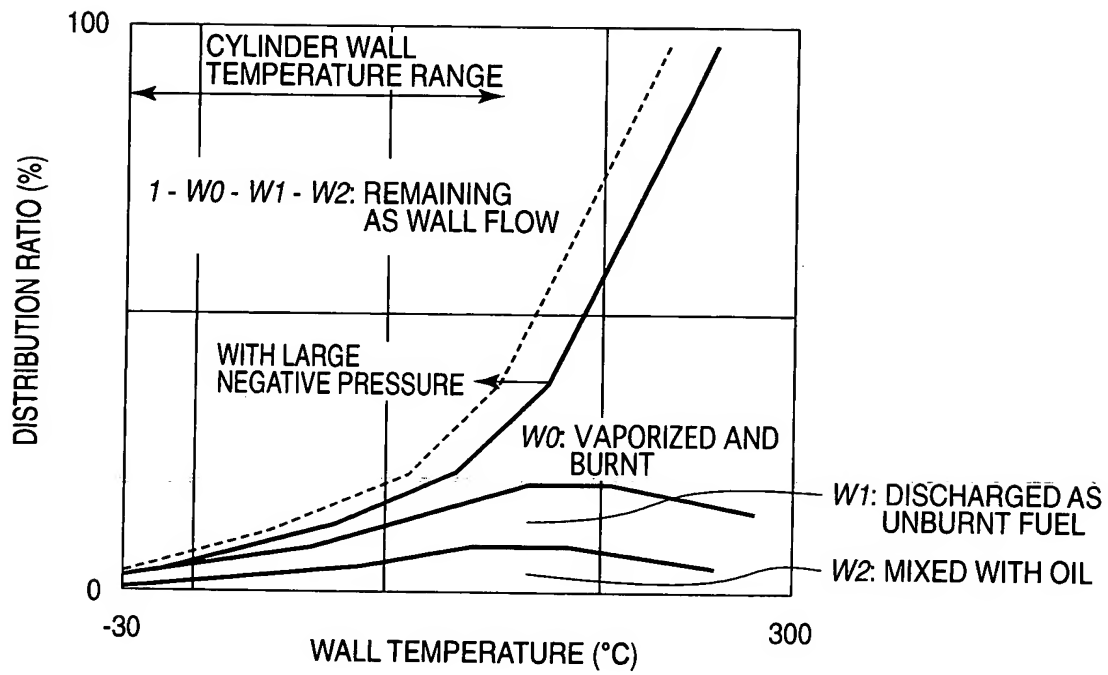


FIG. 12

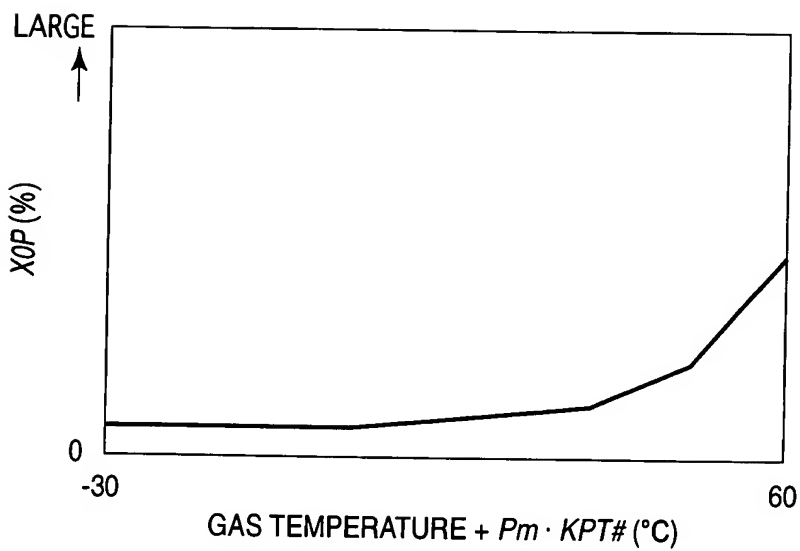


FIG. 13

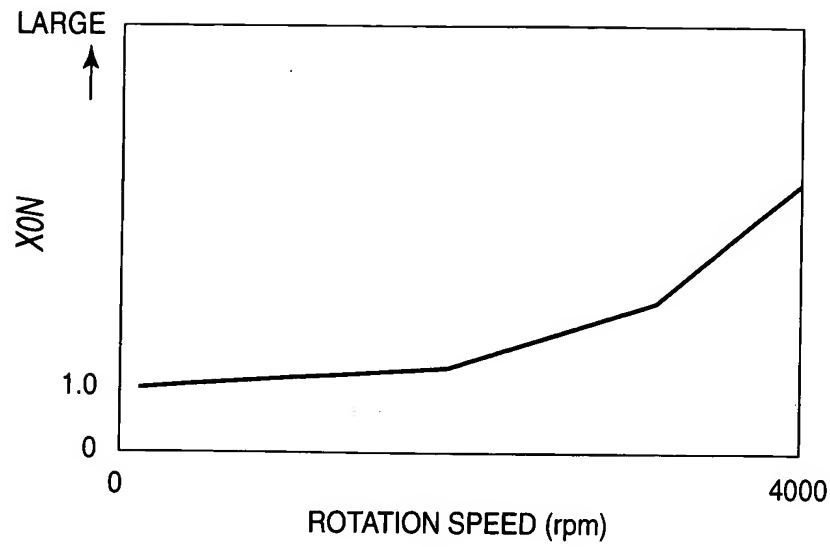


FIG. 14

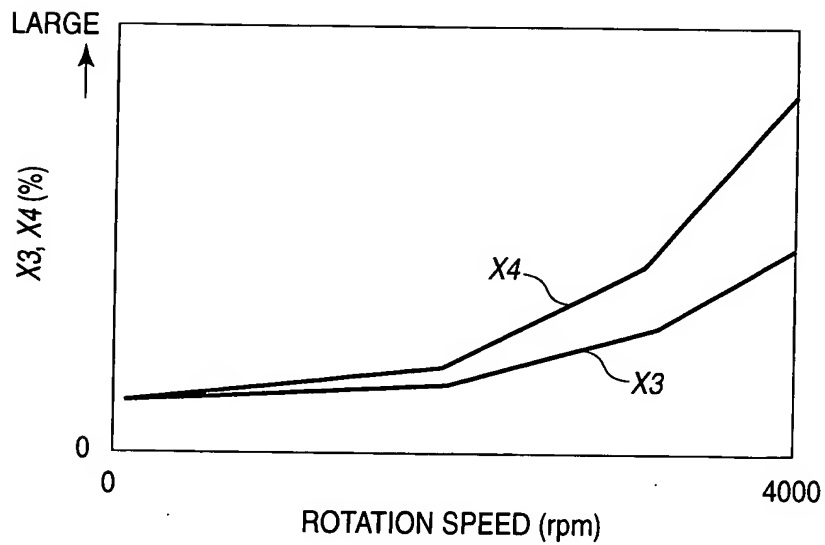


FIG. 15

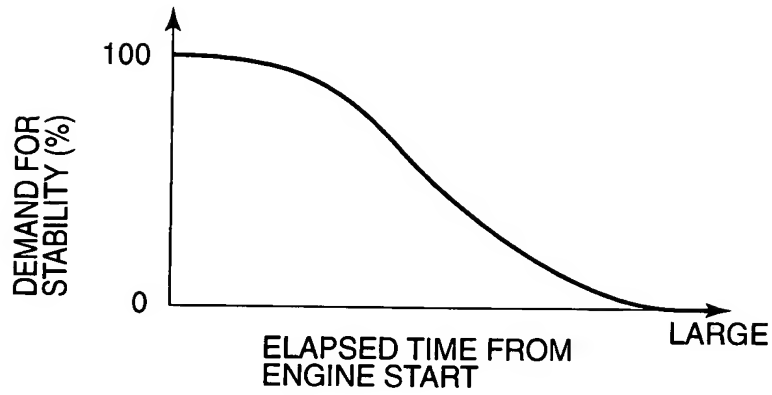


FIG. 16

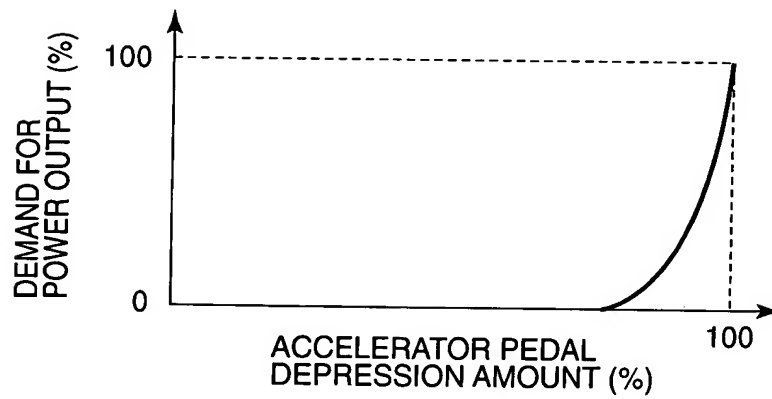


FIG. 17

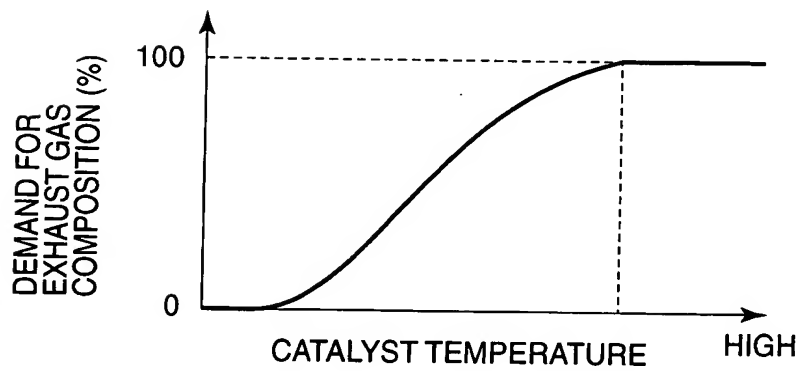


FIG. 18